Traxxas Revo True-Track Rear A-arm Conversion Kit
#80562 - Black #80565 - Blue

Contents: 2 - Upper A-arms, 2 - Lower A-arms, 2 - Axle Carriers, 2 - 4mm
Hinge Pins, 4 - E-Clips, 2 - M3x16mm shock mount screws, 2 - Aluminum
Pivot Ball Setscrews, 2 - Delrin Pivot Ball Bushing Cups, 2 - 6x15mm
Sealed Outer Bearings and 2 - 12x21mm Sealed Inner Bearings.

Disassembly: Remove both rear wheels, hex adapters, drive pins and
any spacers found on the drive shafts. For ease of disassembly, remove
the two screws holding the EZ-Start plug to the rear body mounts and
separate the plug from the body mounts. Remove the screw holding the
muffler support wire to the body mounts. Remove the 3 screws holding
the body mounts to the chassis and remove the body mounts from the
chassis, exposing the upper rear hinge pins. Remove the rear skid plate
by removing the 4 screws holding the rear skid plate to the chassis.
Remove the 2 screws holding the shock push rods to the lower A-arms
(you may leave the shocks attached to the rocker assembly). Remove
the toe rods holding the axle carriers to the bulkheads. Remove the
steel pivot balls from the plastic rod end of the toe rods and place
them back in to their original mounting positions in the bulkhead,
locking them down with the stock screws (these pivot balls, without the
toe rods attached are now used as spacers to help support the
aluminum bulkhead brace). Remove the stock axle carriers by
unscrewing the pivot balls from the stock axle carriers as well as
two of the blue silicone dust boots and two plastic dust boot retainers you may discard the stock plastic pivot ball setscrews and the 4 small
spool-shaped dust covers found inside of the stock pivot ball setscrews)
Finally, remove the upper & lower A-arms from the truck (retaining the
stock hinge pins).

Pre-Installation: Set up your RPM axle carriers first. Press the smaller

you may discard the stock plastic pivot ball setscrews and the 4 small spool-shaped dust covers found inside of the stock pivot ball setscrews) Finally, remove the upper & lower A-arms from the truck (retaining the stock hinge pins).

Pre-Installation: Set up your RPM axle carriers first. Press the smaller bearings into the outer bores followed by the larger bearings in the inner bores of the axle carriers. Press all 4 bearings firmly into their seats. Next, take a stock pivot ball and drop it (thread first) into the threaded hole in the RPM axle carrier. Next, press one of the black bushing cups into the RPM aluminum pivot ball setscrew. Thread the aluminum setscrew and bushing cap into the axle carrier de aluminum setscrew and bushing cap into the axle carrier. Caution: Do not use the stock plastic pivot ball setscrews - they will damage your RPM axle carriers! Start by dropping the RPM aluminum setscrew/bushing cup (with the bushing cup end in first) into the threaded hole and slowly turn the screw counter-clockwise until you see it drop into the first thread of the axle carrier (this will help prevent cross-threading of the hole - cross-threaded holes are not covered under RPM warranty protection so please use caution). At this point, you can thread the setscrew in clockwise. Thread the setscrew in until movement of the pivot ball just begins to bind and then back the setscrew off approximately 1/8 of a turn. Repeat for the other axle carrier. You may now install the blue silicone dust boot over the pivot ball and lock it in place with a stock plastic boot retainer.

Snap an E-clip on one end of each of the hinge pins. Note the two sides of the E-clip; the smooth side should face the inner area of the hinge pin towards the A-arm. Slide the end without the E-clip into the lower a-arm, then through one of the axle carriers & out of the other end of the a-arm. Install the second E-clip (smooth side towards the A-arm again) on the hinge pin & repeat for both A-arms.

Installation: Make sure the suspension rocke

pivot ball in until the last thread of the pivot ball meets the edge of the upper A-arm. **Do not bottom out the pivot ball in the hole!** Reinstall the skid plate, body mount, muffler support wire, EZ-Start plug, axle washers (if any), drive pins, hex adapters & lastly, install your wheels. **Set-Up:** Now would be a great time to check your Camber settings of your rear wheels using your **RPM Monster Camber Gauge** (**RPM #70950**). Camber settings vary according to personal preference but a good starting point for your rear wheels would be about negative two or three degrees for most off-road conditions. Negative camber is when the top of the tire leans towards the center of the chassis. **Troubleshooting:**Suspension doesn't move or binds **A.** The pivot ball corcerus.

Suspension doesn't move or binds. A: The pivot ball setscrews are too tight. Loosen the setscrews about 1/8 of a turn or until the

suspension moves freely.

Truck turns better / worse one way than the other. **A:** Camber settings are incorrect. Adjust camber using an **RPM** Camber Gauge so

both sides are equal. Replacement Parts: The following is a list of replacement parts if any of your *RPM* stock components become damaged or worn out:

#80010 - Pillow-Ball Setscrews & Bushing Cups (4 ea.)

#80570 - Replacement Bearing Set (2 - 15mm & 2 - 21mm

Bearings) #80970 - Replacement Hinge Pins & E-Clips (2 - 4mm. Hinge