


## #81372 & #81422 Associated B6 & B6D Front A-arms

**Installation Notes:** Swapping your stock A-arms with your new **RPM** versions is as simple as removing and replacing the stock A-arms with only one easy difference.

**RPM** A-arms do not have a hole for an offset screw to retain the outer hinge pins.

Instead, we use an in-line screw. Slip the hinge pin in place, then follow the hinge pin with the included #6 Pan Head Screw. **Caution:** Do not overtighten the screw. □

Install Hinge Pin  
from this side

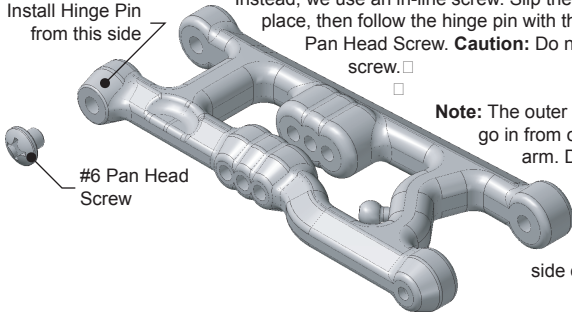

**Note:** The outer hinge pin will only go in from one side of the A-arm. Do not try to force it in from the wrong side. The correct side is from the conical side of the arm.