

#73502 Associated B64 & B64D Front A-arms

Installation Notes: Swapping your stock A-arms with your new *RPM* versions is as simple as removing and replacing the stock A-arms, with only one easy difference.


RPM A-arms do not have a hole for an offset screw to retain the outer hinge pins.

Instead, we use an in-line screw. Slip the hinge pin in place, then follow the hinge pin with the included #6

Pan Head Screw. **Caution:** Do not overtighten the screw. □



Install Hinge Pin
from this side

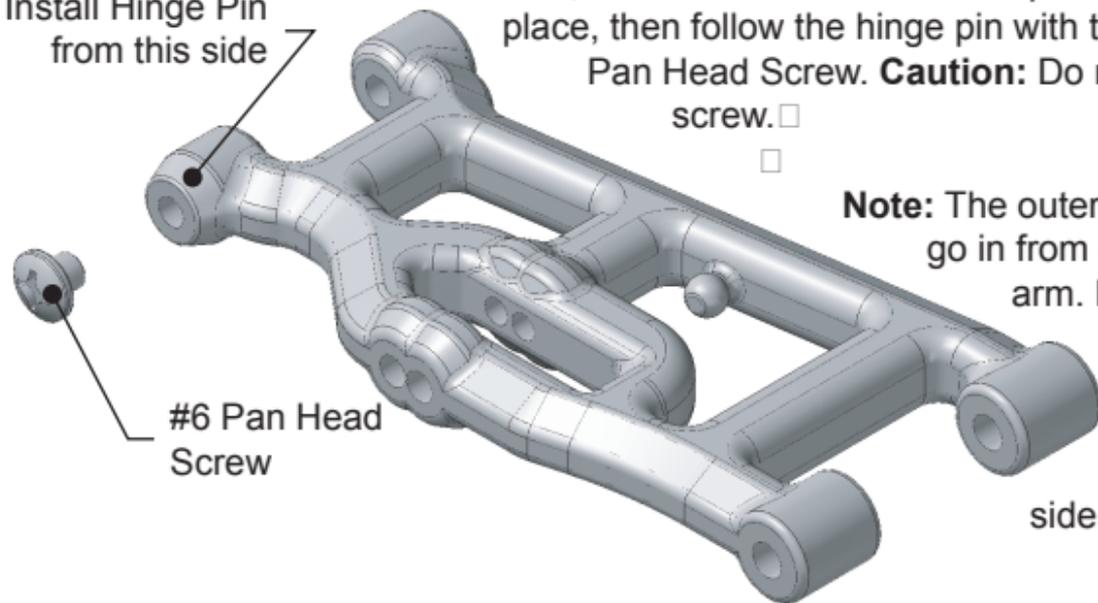

#6 Pan Head
Screw

Note: The outer hinge pin will only go in from one side of the A-arm. Do not try to force it in from the wrong side. The correct side is from the conical side of the arm.