


#73822 Associated B64 & B64D Rear A-arms

Installation Notes: Swapping your stock A-arms with your new **RPM** versions is as simple as removing and replacing the stock A-arms, with only one easy difference. **RPM** A-arms do not have a hole for an offset screw to

retain the outer hinge pins. Instead, we use an in-line screw. Slip the hinge pin in place, then follow the hinge pin with the included #6 Pan Head Screw. **Caution:** Do not overtighten the screw. □



Note: The outer hinge pin will only go in from one side of the A-arm. Do not try to force it in from the wrong side. The correct side is from the conical side of the arm.

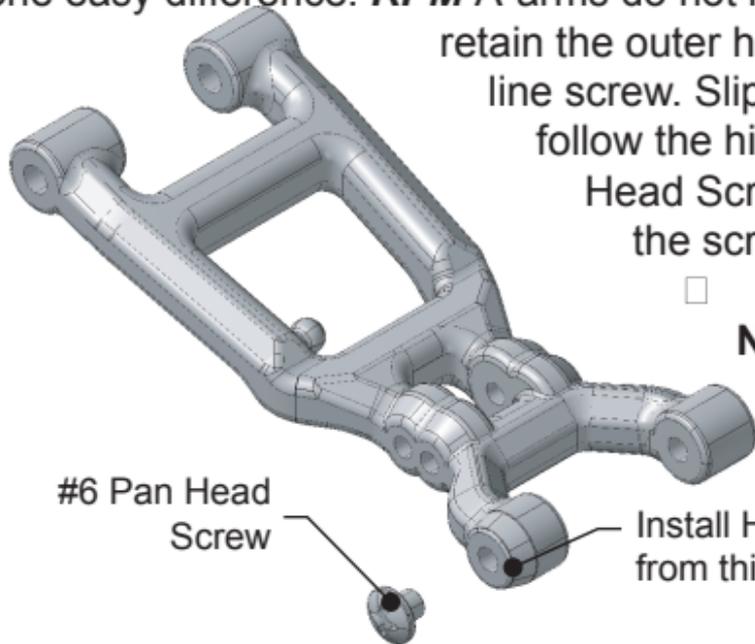

#6 Pan Head
Screw

Install Hinge Pin
from this side