


**#73032 - Mud Flap and Number Plate Kit  
for RPM Losi SCTE Rear Bumpers (#73112)**

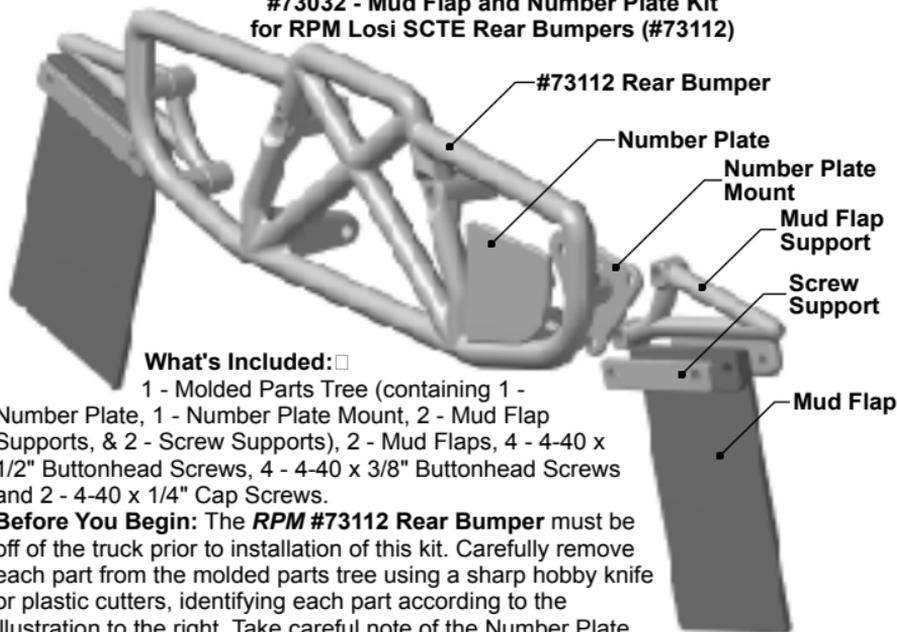

**What's Included:** □

1 - Molded Parts Tree (containing 1 - Number Plate, 1 - Number Plate Mount, 2 - Mud Flap Supports, & 2 - Screw Supports), 2 - Mud Flaps, 4 - 4-40 x 1/2" Buttonhead Screws, 4 - 4-40 x 3/8" Buttonhead Screws and 2 - 4-40 x 1/4" Cap Screws.

**Before You Begin:** The *RPM* #73112 Rear Bumper must be off of the truck prior to installation of this kit. Carefully remove each part from the molded parts tree using a sharp hobby knife or plastic cutters, identifying each part according to the illustration to the right. Take careful note of the Number Plate Mount and its orientation. The three in-line holes will orient towards the top. Take note of the "NP" label. The two mounting screws for the number plate will enter from these two holes.

**Mud Flap Assembly:** Please review the illustration. Using the 4-40 x 3/8" buttonhead screws included in this kit, slip each screw through the Screw Support, then through the Mud Flap (with the *RPM* logo facing the rear of the truck) and finally, thread it into the Mud Flap Support. Make sure you assemble both a left and a right side Mud Flap Assembly (they should appear to be mirror images of each other).

**Number Plate Assembly:** Align the Number Plate with the Number Plate Mount and, using the 2 - 4-40 x 1/4" cap screws included in this kit, carefully bolt the two pieces together. *Do not overtighten the screws.* Looking from the rear of the truck, the number plate should be visible, with the large radius towards the bottom right and both Number Plate Mount holes should still be visible to the right of the Number Plate.

**Final Assembly:** Slip the Number Plate Assembly in position from behind the bumper, aligning the two open holes with the mounting bosses in the *RPM* Rear Bumper. Next, Place the right side (viewed from the back of the truck) Mud Flap Assembly behind the Number Plate Assembly and bolt them to the Rear Bumper using 2 - 4-40 x 1/2" buttonhead screws. The driver's side Mud Flap can then be secured in place with the remaining 2 - 4-40 x 1/2" buttonhead screws. The *RPM* Rear Bumper, Mud Flaps and Number Plate is now ready to be installed on your Losi Ten SCTE.