

#73312 - RPM Rear Bumper Mount for the Losi Ten-SCTE


What's Included: 1 - Left Side Bumper Support, 1 - Right Side Bumper Support, 1 - Upper Bumper Mount, 1 - Lower Bumper Mount & 4 - 5-40 x 3/4" Buttonhead Screws.

Disassembly of Stock Components: Remove the rear bumper from the stock bumper supports, retaining all four screws for use later. Remove the stock bumper supports from the truck (2 screws at the shock tower and 2 at the rear suspension mounts), retaining these four screws for use later as well. There are an additional four screws that hold the stock bumper supports together. They will not be needed for your **RPM** Bumper Mounts.

Identification of Parts: Refer to the illustration to the right for identification of the four components of your new rear bumper mount and how they orient in relation to the rear bumper. The left and right side Bumper Supports will be marked with an "L" and "R" respectively. The Upper Bumper Mount has "T"-shaped ribs and bullet-nose screw bosses. The Lower Bumper Mount is vaguely "Z"-shaped with no support ribs. □

-
- Assembly of the RPM Rear Bumper Mounts:**
- 1) Starting with the Left Side Bumper Support, attach it to the upper hole of the Upper Bumper Mount using one of the included 5-40 x 3/4" Buttonhead Screws. Make sure the "L" on the Support faces **away** from the Mount.
 - 2) Attach the Lower Bumper Mount to the lower hole of the Support, also using one of the included screws.
 - 3) Looking at the Right Side Bumper Support, Find the "R" and make sure it faces **away** from the Mounts as you install it on the opposite side of the assembly using the remaining two included screws.
 - 4) Finally, reinstall your bumper using the screws you removed earlier. □
-

Optional* Low Visibility Wheelie Bars (RPM #81312): Refer to the instructions that came with your **RPM** Low Visibility Wheelie Bars for the correct Wheel-to-Bracket assembly. The installation of the Wheelie Bars is slightly different here than in the instructions that came with your Wheelie Bars. Refer to the illustration above for the correct orientation. The **RPM** Logo on the Wheelie Bar assembly will be **inverted** on the SCTE Rear Bumper

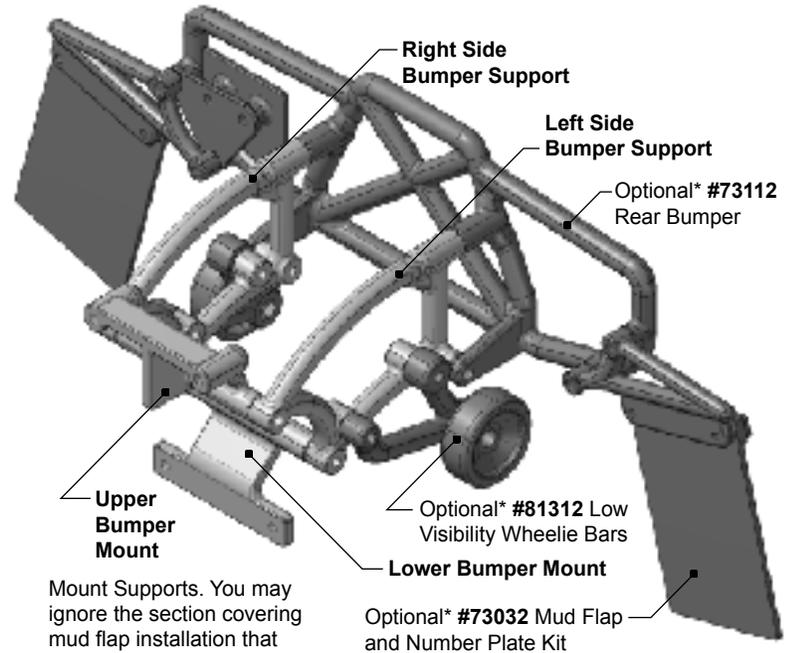

Mount Supports. You may ignore the section covering mud flap installation that came with your Wheelie Bars. For reference, an optional* **RPM** Mud Flap and Number Plate Kit is available for the SCTE (**RPM #73032**). However, they mount to the optional* **RPM** SCTE Rear Bumper (**RPM #73112**) as shown in the illustration above.

Final Assembly / Installation: Align the **RPM** Rear Bumper Mount assembly to the rear of the truck. The bullet-style bosses in the Upper Bumper Mount will bolt to the rear shock tower in the stock location using the shorter of the two stock screws removed earlier. The Lower Bumper Mount will bolt to the rear suspension mounts using the two longer stock screws.

*Optional **RPM** parts listed throughout these instructions are sold separately.