

## #73682 - Durango DESC410R Front Bumper & Skid Plate


**What's Included:** 1 - Front Bumper, 1 - Front Skid Plate & 3 - M3 x 12mm buttonhead screws. □

□

**Disassembly:** Remove the stock bumper by first removing and discarding the two top buttonhead screws holding the bumper to the front differential cover. Remove *and retain* the six flathead screws holding the skid plate to the bottom of the vehicle. □

□

**Bumper to Skid Plate Assembly:** Using the 3 included M3 x 12mm buttonhead screws, secure the front bumper to the skid plate as shown in the illustration below. If you are installing an **RPM** Light Canister Set (**RPM #80982** or **#80983**), install it now (**step #5** in the Light Canister instruction sheet).

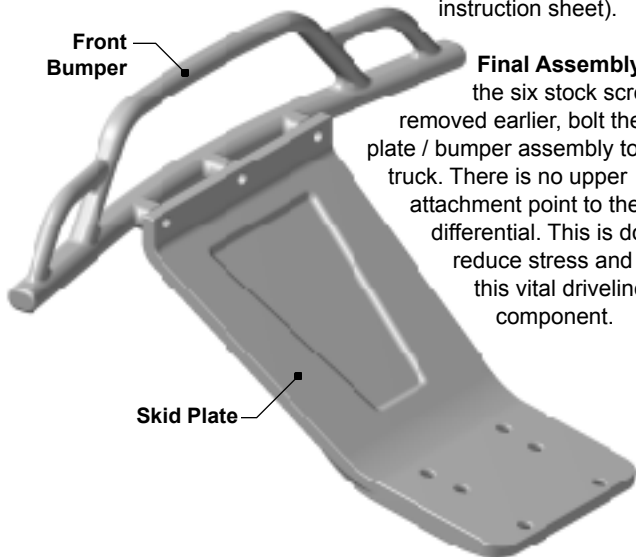

**Final Assembly:** Using the six stock screws removed earlier, bolt the skid plate / bumper assembly to the truck. There is no upper attachment point to the differential. This is done to reduce stress and protect this vital driveline component.