


#81082 - Rear Bumper for the Associated B6 & B6D

What's Included: 1 - Rear Bumper & 2 - M3 x 12mm Flathead Screws

Installation: 1) Remove the four stock screws at the rear of the chassis. You may discard the M3 x 10mm screws but keep the M3 x 16mm screws for installation with this bumper. □

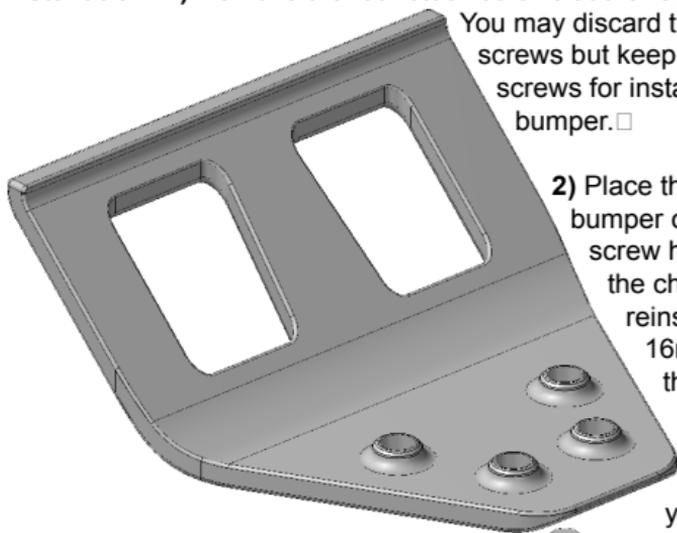

2) Place the **RPM** Rear bumper over those 4 screw hole locations in the chassis and reinstall the two M3 x 16mm screws in their original locations. Replace the M3 x 10mm screws you removed earlier with the two M3 x 12mm screws included in this kit.

**Stock
M3 x 16mm**

M3 x 12mm

