


#81492 ARRMA Senton 4x4, Big Rock 4x4 & Granite 4x4 Front A-arms

#80762 ARRMA Typhon 4x4 3s BLX Front A-arms

Installation Notes: Swapping your stock A-arms with your new **RPM** versions is as simple as removing and replacing the stock A-arms, with only one easy difference. **RPM** A-arms do not have a hole for an offset screw to retain the outer hinge pins. Instead, we use an in-line screw. Slip the hinge pin in place, then follow the hinge pin with the included #6 Pan Head Screw. **Caution:** Do not overtighten the screw. □

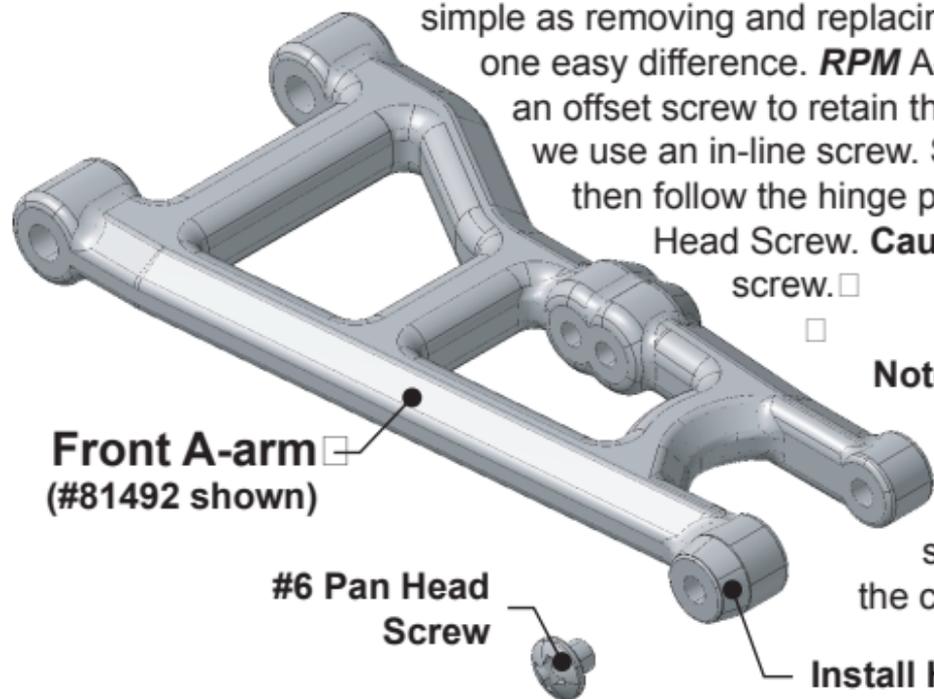

Front A-arm □
(#81492 shown)

**#6 Pan Head
Screw**

Note: The outer hinge pin will only go in from one side of the A-arm. Do not try to force it in from the wrong side. The correct side is from the conical side of the arm.

Install Hinge Pin from this side