


**#81502 ARRMA Senton 4x4, Big Rock 4x4 & Granite 4x4 Rear A-arms**  
**#80842 ARRMA Typhon 4x4 3S BLX Rear A-arms**

**Installation Notes:** Swapping your stock A-arms with your new *RPM* versions is as simple as removing and replacing the stock A-arms, with only one easy difference.

*RPM* A-arms do not have a hole for an offset screw to retain the outer hinge pins. Instead, we use an in-line screw. Slip the hinge pin in place, then follow the hinge pin with the included #10 Pan Head Screw. **Caution:** It may take some force to start the screw. Do not overtighten it once seated. □

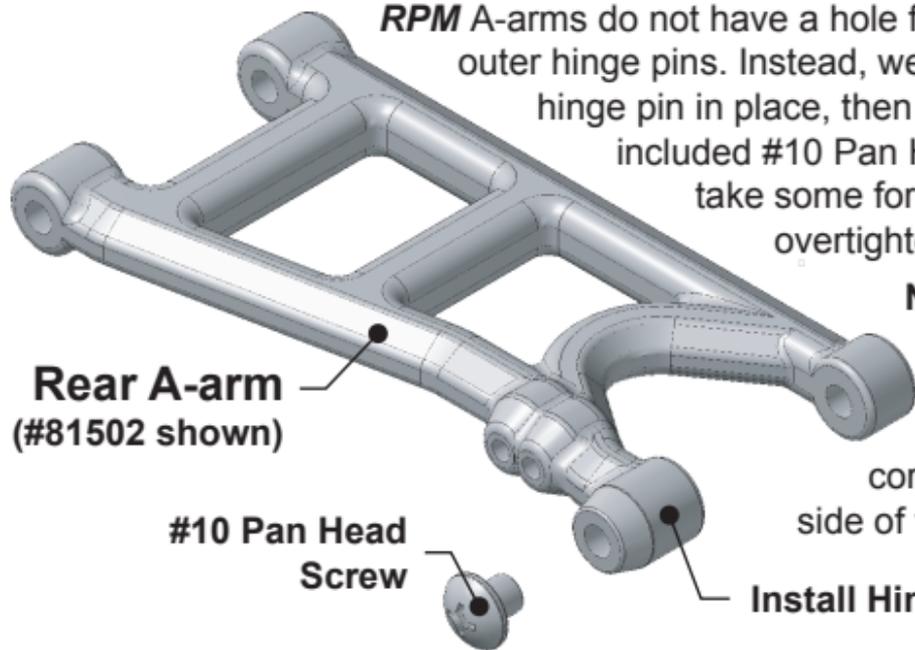

**Rear A-arm**  
(#81502 shown)

**#10 Pan Head  
Screw**

**Install Hinge Pin from this side**

**Note:** The outer hinge pin will only go in from one side of the A-arm. Do not try to force it in from the wrong side. The correct side is from the conical side of the arm.