


#72132 Associated Pro2 SC10 & Related Model Front A-arms

Installation Notes: Swapping your stock A-arms with your new *RPM* A-arms is as simple as remove and replace, with only one easy difference. *RPM* A-arms do not have a hole for an offset screw to retain the hinge pins. Instead, we use in-line screws.

Slip the hinge pins in place, then follow the hinge pins with the included #6 Pan Head Screws. **Caution:** Do not overtighten the screws.

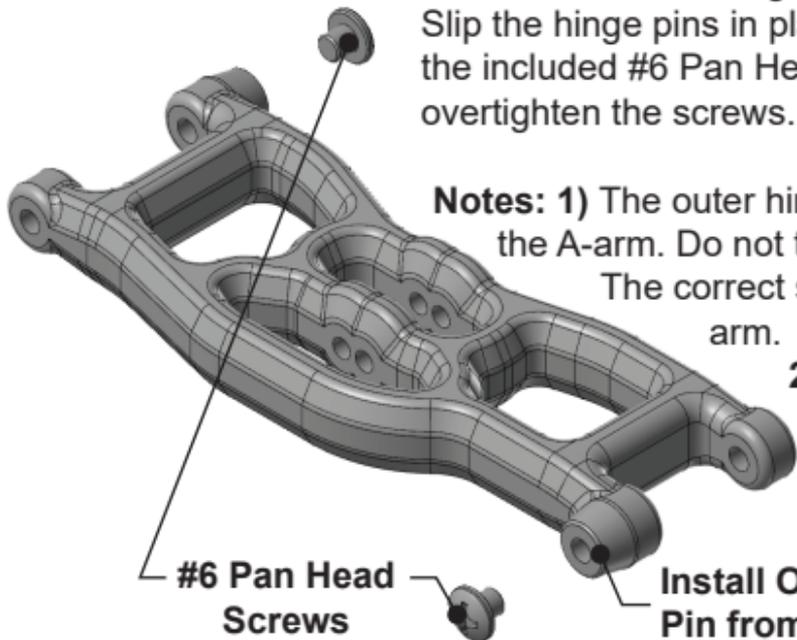

Notes: 1) The outer hinge pin will only go in from one side of the A-arm. Do not try to force it in from the wrong side. The correct side is from the conical side of the arm.

2) The inner hinge pin can be installed from either side, but the #6 Pan Head Screw must be installed on the conical side.

#6 Pan Head
Screws

Install Outer Hinge
Pin from this side